



# KEURIG® Quick Start Guide

Premium Coffee Systems

## Let the Magic Begin *FAST!*

Thank you for purchasing a Keurig® Special Edition - Model B60 Gourmet Single Cup Home Brewing System.

**IMPORTANT:** You cannot use your Keurig Brewer until it has been primed for its first use as set forth below. Please follow these easy steps and you will discover what Deliciously Simple™ truly means.


**Please note,** if your Brewer has been exposed to temperatures below freezing, it is recommended you allow two hours for an unpacked brewer to warm to room temperature before priming or brewing.

### 1. Unpacking the Special Edition - Model B60 Brewer

- Carefully remove the Brewer by placing the box on its side, and pulling the Brewer out of the box and removing the protective materials.
- Place the Brewer upright on a flat surface. Remove three pieces of adhesive tape from Brewer.
- Unwrap cord and plug Brewer into a grounded outlet.

### 2. Priming

- Place a cup or mug on the Drip Tray Plate.
- Remove the Water Reservoir from the Brewer by first removing the Lid from the Water Reservoir, then lifting the Water Reservoir straight up and away from the Brewer. Rinse and fill with cold water. Replace the Water Reservoir back on the Brewer and replace the Lid.
- Press the Power Button to turn the Brewer on and the blue light in the Water Reservoir and LCD Control Center will become illuminated.
- The LCD Control Center will indicate 'PRIME' and the Mug button will flash. Please note, a K-Cup® portion pack should not be used for the Priming Sequence.

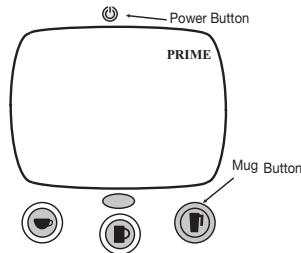

- Press the flashing blue Mug button.
- The Brewer will automatically fill (priming it) and then the water will be heated. This will take about 3 minutes. During the heating period the 'NOT READY' indicator will be on. When the water is heated 'READY' will be

displayed and the Mug button will flash.

- Press the blue Mug button to start a cleansing brew, during which hot water will flow into your cup or mug. Pour the hot water into the sink.
- The one-time priming process is now complete and you are ready to brew!

**NOTE:** The Brewer may take 15 seconds to reheat between brews and the LCD Control Center will indicate 'NOT READY'. During this time the pump may cause a vibration noise. This is normal. The LCD Control Center will indicate 'READY TO BREW' once the water has heated and the Brewer is ready.


### 3. Choose

- Place a cup or mug on the Drip Tray Plate.
- Select a K-Cup® portion pack. *Do not remove the foil lid.*



### 4. Brew

- Lift the Handle, place the K-Cup in the K-Cup Holder Assembly and then push the Handle all the way down to puncture the K-Cup. *Please be careful to avoid the sharp needles in the K-Cup Assembly Housing & Lid.*
- Select a brew size by pressing the flashing Cup, Mug or Travel Mug button.

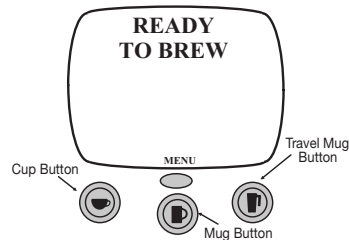

**NOTE:** The smaller cup will brew stronger tasting coffee/tea.

Please consult the Use & Care Guide for additional information on your Brewer. If you are experiencing problems, contact Customer Service at 1-866-901-BREW (2739).

© 2005 Keurig Incorporated

Part #: 60-200258-037  
Revision B, August 2006

